

Tool Repair Tools – Available from Alpha®



RUST INHIBITOR OIL

Part Number: AIR-008

Reference: For use on all pneumatic tools as a rust inhibitor



SMALL BEARING PULLER

Part Number: AT004

Reference: Used to pull the small bearings off the armatures on the electric stonecutters and polishers



METAL CYLINDER CLAMP

Part Number: AT001

Reference: Used to disassemble the rotor assembly on the AIR-300



LARGE BEARING PULLER

Part Number: AT005

Reference: Used to pull the gear and bearing case off the rotor assemblies on the PSC-150 and PSG-125



METAL CYLINDER CLAMP

Part Number: AT002

Reference: Used to disassemble the rotor assembly on the AIR-658, 860 830, 850, PSC-600 & PSG-658



SMALL COMMUTATOR CLEANING STONE

Part Number: AT006

Reference: Used to clean and polish the commutator bars on the armatures of the electric motors



PLASTIC BLOCK

Part Number: AT003

Reference: Plastic block is used to disassembly all tools without damaging the aluminum housing



CRIMPER FOR DOUBLE CRIMP TERMINALS

Part Number: AT008

Reference: Used to crimp the double crimp solderless connectors for the speed pots, on/off switches, and carbon brush holders on the electric tools



50-55 PIN SPANNER WRENCH

Part Number: AT009

Reference: Used to loosen and tighten the nut part # 3002-0035 on the PSG-125 and reposition the rear body

Tools Repair Tools – Available from Alpha®



REMOVAL WRENCH FOR 3001-0079

Part Number: AT010

Reference: Used to remove and install the spring seal part # 3001-0079 on the PSC-150



BEARING PUSH REMOVER FOR 8MM ID BEARINGS

Part Number: ST017

Reference: Can be used to remove any bearing with an 8mm ID



REMOVAL WRENCH FOR 3002-0008

Part Number: AT011

Reference: Used to remove and install the lock nut part # 3002-0008 on the PSG-125



BEARING PUSH REMOVER FOR 6MM ID BEARINGS

Part Number: ST018

Reference: Can be used to remove any bearing with a 6mm ID



DC112 LUBE/SEALANT 5.3OZ TUBE

Part Number: AT012

Reference: The lube/sealant can be used on any O-ring or rubber seal to decrease the friction and increase the sealing



40-42 MM PIN SPANNER WRENCH

Part Number: ST033

Reference: This pin spanner is used to remove and install the nut 38mm part # 300028 on the AIR-300



BEARING PUSH REMOVER FOR 12MM ID BEARINGS

Part Number: ST004

Reference: Can be used to remove any bearing with a 12mm ID



BEARING PUSH REMOVER FOR 6.3MM ID BEARINGS

Part Number: ST045

Reference: Can be used to remove any bearing with a 6.3mm ID



BEARING PUSH REMOVER FOR 10 MM ID BEARINGS

Part Number: ST005

Reference: Can be used to remove any bearing with a 10mm ID

Tools Repair Tools – Available from Alpha®



NUT REMOVAL TOOL FOR 300015

Part Number: ST051

Reference: Used to remove and install the nut 34mm part # 300015 on the AIR-300



BEARING PUSH REMOVER FOR 9 MM ID BEARINGS

Part Number: ST059

Reference: Can be used to remove any bearing with a 6.3mm ID



NUT REMOVAL TOOL FOR 300029

Part Number: ST052

Reference: Used to remove and install the retainer nut part # 300029 on the AIR-300



SCREW CAP REMOVAL TOOL

Part Number: 260301

Reference: Used to remove and install the screw cap on AWS-110, ECC-125, ESC-125



NUT REMOVAL TOOL FOR 516-50

Part Number: ST055

Reference: Used to remove and install the 44mm nut part # 516-50 on the AIR-658, 680, 830, 850, PSC-600 and PSG-658



GREASE 14oz CARTRIDGE

Part Number: 300048

Reference: For use in all tool gearboxes



GREASE NEEDLE POINT COUPLER

Part Number: 300051

Reference: For AIR-300 monthly lubrication



BEARING PUSH REMOVER FOR 15 MM ID BEARINGS

Part Number: ST057

Reference: Can be used to remove any bearing with a 6.3mm ID
